



INSTALLATION MANUAL


SENSOR MOUNTING ACCESSORY FOR SEMI-HIDDEN WINCH MOUNT

PRODUCT NUMBER: M6750

APPLICATION: 2017 MERCEDES SPRINTER VAN



PROVIDED MATERIALS

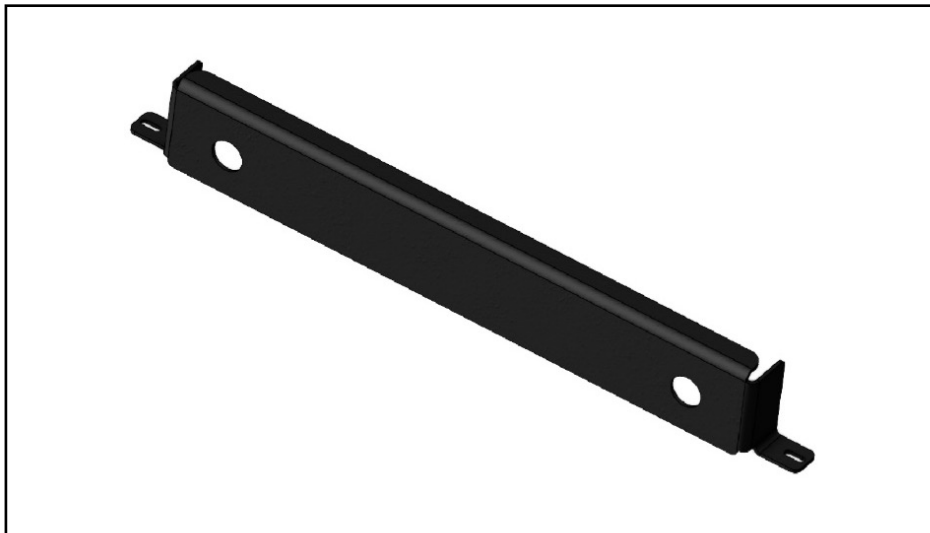

M6750

TOOLS REQUIRED

- 7/16" SOCKET WRENCH
- 7/16" COMBINATION WRENCH

ASSISTANCE

We recommend two people perform the installation as items are heavy and may need to be held in place while installing.

ORGANIZATION

Disassemble the vehicle where you can catalog and store everything. We suggest labeling and bagging all the OEM bolts when removing from the vehicle. Failure to keep track of parts could lead to an inability to properly reinstall components.

HARDWARE KIT | M6750-IM

FAB FOURS IDENTIFICATION	COMPONENT DESCRIPTION	QTY
50373-HW	1/4"-20 x 1", Yellow-zinc, Grade 8, Hex head cap screw	2
50373-HW	1/4"-20, Yellow-zinc, Grade 8, Hex nut	2
50373-HW	1/4"-SAE, Yellow-zinc, Grade 8, Flat washer	4
50373-HW	1/4"-SAE, Yellow-zinc, Grade 8, Lock washer	2

1. Using a 7/16" socket and combination wrench, install the provided M6750 bracket to the N465X shell lightbar tabs with the provided 1/4" hex head screws, flat and lock washers, and nuts. Figure 1



2. Using the provided epoxy, adhere the factory sensor housings to the inside of the M6750 in the same orientation in which they were removed from the factory bumper. The harness retainers should be facing down toward the d-ring cutouts. Figure 2



3. The parking sensors can be clipped back into their respective housings.
4. Continue installation of your bumper with the N465X-IM.

CONTACT INFORMATION

**FAB FOURS INC.
2213 INDUSTRIAL PARK ROAD
LANCASTER, SC 29720**

PHONE: (866) 385-1905

FAX: 970-385-1914

EMAIL: SUPPORT@FABFOURS.COM

FABFOURS.COM



**“IF YOU’RE LOOKING FOR MORE OF THE SAME,
THEN YOU’VE COME TO THE WRONG PLACE.”**

- GREG HIGGS

